 
1 Install the Batteries or Home Power Adapter

 
The Premium Sound System can operate on either batteries or by using the Home Power Adapter if you are near an

To use your Premium Sound System on-the-go:

A. Open the battery compartment on the bottom of the Premium Sound System. Insert 8 C-cell alkaline batteries in the battery compartment.



B. Replace the battery cover.







TIP! It is not recommended to keep batteries in the Premium Sound System for an extended length of time. Remove the batteries when not in use.

To use your Premium Sound System with the Home Power Adapter:

- A. Plug the Home Power Adapter into the connector labeled DC POWER at the rear of the Portable Speaker Dock.
- **B.** Plug the other end of the Home Power Adapter into a standard wall outlet.

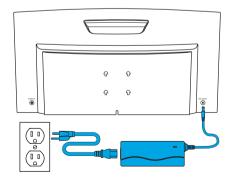

2 Install the Dock Adapter for Your Radio

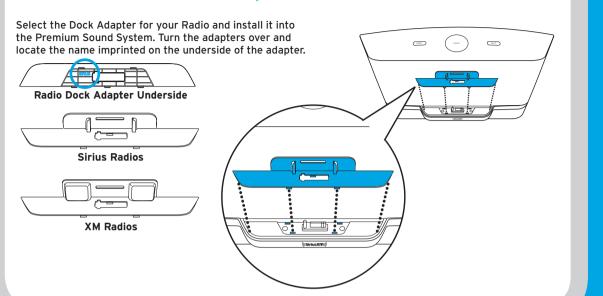


4 Install the Indoor/Outdoor Home Antenna

- A. Wrap the antenna cable into the storage
- B. Plug the antenna cable into the antenna connector at the left rear.
- **C.** Place the antenna into the storage area at the rear of the Premium Sound System. Alian the mounting holes on the bottom of the antenna with the 4 mounting brackets on the rear of the Premium Sound System. Push the antenna over the mounting brackets and then slide the antenna down slightly to secure it in place.
- **D.** Open the antenna clamshell so that the top of the antenna is facing the sky.




TIP! If you are using the Premium Sound System indoors, consult the User Manual beginning on page 16 for instructions for indoor antenna placement.

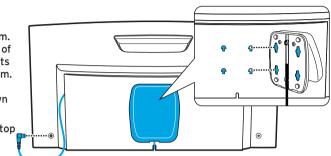

3 Insert Radio and Turn On the Premium Sound System

- A. Be sure the Premium Sound System is powered off.
- B. Align the Radio with the Radio Dock Adapter.
- C. Once aligned, gently press the Radio down so that it slides down Radio Dock Adapter and onto the connector until it is fully seated in the Premium Sound System.
- **D.** Press and hold the **Power button** on the top of the Premium Sound System until the Power On light is on.
- **E.** If your Radio did not power on, press the Power button on your Radio.

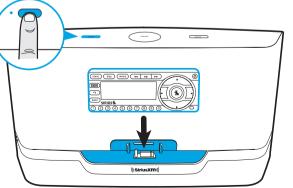


5 Adjust the Audio Level

If your Radio has a Audio Level or Line Out Level adjustment feature in the Settings menu when it's docked in the Premium Sound System, you should set this level to the maximum volume that does not cause distorted sound. This will maximize the audio quality. Refer to the User Guide which accompanied your Radio for instructions on how to set the level.

Some Radios do not have this adjustment available when docked in the Premium Sound System. These Radios set their level automatically to optimize the sound quality. No adjustment is necessary.

The installation is complete. Sit back and enjoy your favourite programming on SiriusXM Satellite Radio!

Premium Sound System Controls and Connections

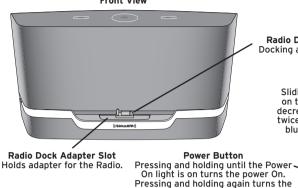

Radio Dock Connection Docking area for the Radio.

> Volume/Mute Control Sliding a finger in a circular motion on the volume control increases or Volume Level Lights decreases the volume level. Pressing twice mutes the audio and a circle of

 
blue lights will flash while muted. Aux In Button When on, Premium

vólume level.

to Aux In input.

The light is steady blue when the Premium Sound System is powered on: the light blinks when the batteries Pressing and holding until the are nearly discharged. Aux In light is on switches audio Sound System is set output to Aux In input. Pressing

Indoor/Outdoor Home Antenna



Power On/Low Battery Light

Home Power Adapter.

Antenna Connection DC Power Connection Connection for the Connection for the

Side View Connection for audio from an external device.

Indoor/Outdoor Home Antenna.

 
Battery Compartment Requires 8 C-cell alkaline batteries (sold separately).

Bottom View

What's in the Box?



SiriusXM Premium Sound System



Adapter 1 (Sirius Radios) Sportster 5/6, Starmate 3/4/5/6/7/8, Stratus 3/5/6/7/8



Adapter 2 (XM Radios)
Edge, Onyx, Onyx EZ, Onyx Plus, XpressRCi,
XpressRC, XpressR, Express, XpressEZ
Radio Dock Adapters



Indoor/Outdoor Home Antenna



Power Cord

SiriusXM 12-Month Limited Warranty

What This Warranty Covers

This warranty covers defects in material and workmanship for 12 months from the date of purchase by the original retail purchaser only. SiriusXM Canada Inc., at its sole option, will repair or replace the product with a new or reconditioned product without charge for parts and labour. Products replaced under this warranty become the property of SiriusXM. Replacement products are warranted to be free from defects for 30 days or the remainder of the original warranty, whichever is longer.

hat This Warranty Does Not Cove

This warranty does not cover: products sold as used, as is, reconditioned or refurbished; software stored on internal or removable memory; non-rechargeable batteries, surface preparation cleaners, adhesive pads, fasteners, and ear-buds; costs incurred for installation, removal or reinstallation of the product; correction of installation problems, such as elimination of externally generated static or noise and antenna placement and aiming; defects or damage caused by alteration, improper installation or removal, use of third party accessories, mishandling, misuse, neglect, accident, power surges or acts of nature.

How to Obtain Warranty Service

To obtain warranty service, please call Customer Care at 1-888-539-7474. You will be required to provide proof of purchase and a description of the defect. You must prepay the cost of shipping the product to an approved service center.

LIMITATIONS OF LIABILI

THE LIABILITY OF SIRIUSXM UNDER THIS WARRANTY IS LIMITED TO REPAIR OR REPLACEMENT AS PROVIDED ABOVE AND IN NO EVENT SHALL THE LIABILITY EXCEED THE PURCHASE PRICE PAID FOR THE PRODUCT. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF WARRANTY, INCLUDING BREACH OF ANY IMPLIED WARRANTY OF MERCHANTABILITY, MUST BE BROUGHT WITHIN 48 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL SIRIUSXM BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED. SOME PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. This warranty gives you specific legal rights and you may also have other rights, which vary from province to province.

If you experience problems with the operation or performance of your product

DO NOT RETURN THIS PRODUCT TO YOUR RETAILER

Call Customer Care at 1-888-539-7474

siriusxm.ca

Sirius XM Canada Inc. 135 Liberty St. - 4th floor Toronto, Ontario, M6K 1A7

1-888-539-7474

© 2016 Sirius XM Canada Inc.

Self installation instructions and tips are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills and physical ability required to properly perform an installation. SiriusXM shall have no liability for damage or injury resulting from the installation or use of any SiriusXM or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. SiriusXM warranties do not cover the installation, removal or reinstallation of any product.

This Class B digital apparatus complies with Canadian ICES-003.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.



Quick Start Guide

Premium Sound System